

Operating and Installation instructions for Tumble Dryer T 5206

It is **essential** to read these operating instructions before installing or using the machine, to avoid the risk of accident or damage to the machine.



M.-Nr. 05 493 150

Contents

Warning and safety instructions 4

Help to protect the environment

Disposal of the packing material 7

Disposal of your old machine. 7

Energy saving tips 7

Guide to the machine

Control panel 8

Explanation of control panel. 9

Use of the appliance 9

Preparation of laundry 10

Programme chart 11

How to dry correctly

❶ Prepare the laundry. 13

❷ Load the drum. 13

❸ Select a programme 14

❹ Start a programme 14

❺ At the end of a programme 14

Changing a programme

To cancel a programme. 15

Adding or removing items 15

To select a different programme during drying 15

Cleaning and care

Cleaning the fluff filters	16
Casing and drum	17

Problem solving guide

What to do if . . . ?	18
To change the lamp	21
Service	22

Installation

View from the front	23
View from the rear	24
Aligning the machine	25
Coin mechanism / Time counter	25

Installation - venting

Fitting the exhaust ducting	26
Calculating the duct length	28
Installation examples	30

Electrical connection 33

Electrical connection U.K.	33
Electrical connection TE 5206	34

Technical data 35

Warning and safety instructions

Please read the operating instructions before using the tumble dryer for the first time. They contain important information about the safety, use and maintenance of the machine. This way you will avoid the risk of accidents and damage to the machine.

Keep these operating instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner of the machine.

Correct use

The tumble dryer is only intended for drying fabrics which have been washed in a water solution, marked on the manufacturer's wash care label as being suitable for tumble drying. Any other applications may be dangerous. The manufacturer is not liable for damage resulting from improper use or operation.

Do not let small children play with the machine or its controls. Supervise its use by the elderly or infirm.

Technical safety

Before setting up the machine check it for any externally visible damage. Do not install or use a damaged machine.

Before connecting the machine, ensure that the connection data on the data plate (fusing, voltage and frequency) matches the mains electricity supply. If in any doubt, consult a qualified electrician.

The electrical safety of this machine can only be guaranteed when continuity is complete between the appliance and an effective earthing system which complies with local and national regulations. It is most important that this basic safety requirement is regularly tested by a qualified electrician.

The manufacturer cannot be held responsible for the consequences of an inadequate earthing system (e.g. electric shock).

Do not connect the machine to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the machine (e.g. danger or overheating).

The machine is built in accordance with current safety requirements. Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept responsibility. Repairs should only be undertaken by a Miele approved engineer.

Faulty components must only be exchanged for Miele original spare parts. Only when these parts are fitted can the safety standards of the machine be guaranteed.

Warning and safety instructions

■ In the event of a fault or for cleaning purposes, the machine is only completely isolated from the electricity supply either when:

- it is switched off at the mains or
- the mains fuse is withdrawn.

■ Adequate ventilation is essential, especially where another appliance which also uses the room air (e.g. gas, oil or coal fired heater, continuous flow or other water heater), is installed in the same or an adjacent room. To ensure safe operation, and to prevent gases being given off by these appliances being drawn back into the room, an underpressure of 4 Pa is the maximum permissible. Ventilation can be maintained by air inlets which cannot be blocked, in windows, doors and outside wall vents, or by an automatic window opening arrangement when the tumble dryer is switched on.


If in any doubt, the advice of a competent builder, or for gas, a "Corgi" registered installer (in the UK) must be sought.

■ Vented dryers must be installed with a suitable venting system. If the machine is not correctly ducted it will draw damp exhaust air back into the drum, increasing running time and energy consumption quite considerably. If moist air is passed back into the room this may lead to long-term damage of walls.

■ The exhaust air must not be vented into a chimney or vent flue which is in use. Neither should it be connected to ducting which ventilates rooms with fireplaces. It would be dangerous if smoke or exhaust fumes were drawn back into the room.

■ Always close the door after use. This way you will avoid the danger of:

- anyone sitting or leaning on the door, which can cause the machine to tip up.
- children climbing onto or into the dryer or hiding things in it.

■ Do not install the machine in a room where the temperature may drop below freezing. At very cold temperatures the machine may be difficult to start. Laundry will not dry, and the sequence indicator light  Anti-crease/End will flash to indicate a problem.

Warning and safety instructions

■ There is a danger of fire with fabrics which:

- contain rubber, foam rubber or rubber like materials
- have been treated with inflammable cleaning agents
- have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances
- which contain padding or fillings (e.g. pillows, jackets). If these were damaged the filling could get out with the risk of igniting in the dryer.

■ Avoid contact of stainless steel surfaces (front, lid, casing) with liquid cleaning and disinfecting agents which contain chlorine or sodium hypochlorite. These agents can have a corrosive effect on stainless steel. Aggressive vapours containing chlorine bleach can also be corrosive. Do not store open containers or these agents near the machine.

Using accessories

■ Accessory parts may only be fitted when expressly approved by Miele. If other parts are used, guarantee, performance and product liability claims may be invalidated.

Disposal of your old machine

■ Before discarding an old machine unplug it and render the plug useless. Cut off the cable directly behind the appliance to prevent misuse.

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Rather than just throwing these materials away, please ensure they are offered for recycling.

Disposal of your old machine

Old machines contain materials which can be reclaimed or recycled. Please contact your dealer, your local waste collection centre or scrap merchant about potential recycling schemes.


Ensure that the machine presents no danger to children while being stored for disposal.

Energy saving tips

- Make sure that your laundry is thoroughly spun before drying. You will save up to 30% energy and time if laundry is spun at 1200 rpm instead of at 600 rpm.
- Load according to the optimum amount of washing recommended for the programme being used. Underloading is uneconomical. Overloading gives a poorer quality of drying and may cause unnecessary creasing.
- To save energy and time:
 - make sure the room in which the dryer is located is well ventilated.
 - Make sure the fluff filter is clean before using the dryer.
- The vent ducting should be as short, straight and smooth as possible. Expelled air is slowed down in the vent duct due to friction against the inner walls of the ducting, therefore the shorter the duct and the smoother the inner walls, the less friction occurs which in turns saves drying time and energy costs.

Guide to the machine

Control panel

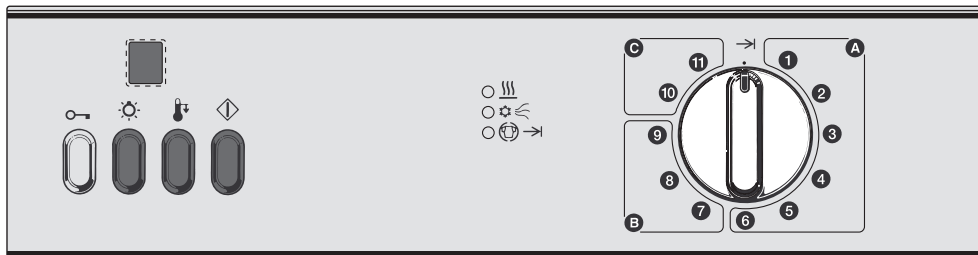

Pushbutton switches


Door

Opens the drum door

Light

Illuminates the drum

Low temperature

Lower drying temperatures (for delicate fabrics with the care label , e.g. acrylics)

Start

Starts a programme

Additional display

(above the pushbutton switches)

Displays the drying stage reached.

Displays “0” at anti-crease stage.

Nothing is displayed with timed drying.

Programme sequence

-  Drying
-  Cool air
-  Anti-crease/End

Programme selector

The programme selector can be turned clockwise or anti-clockwise.

A Cottons

- 1** Extra dry
- 2** Normal+
- 3** Normal
- 4** Hand iron 
- 5** Hand iron  
- 6** Machine iron

B Minimum iron


- 7** Normal+
- 8** Normal
- 9** Hand iron

C Timed drying

- 10** Cool air 15 mins
- 11** Hot air 20 mins

Explanation of control panel

A small panel is supplied with the machine to explain the symbols on the control panel. Position this on the left hand side next to the control panel.

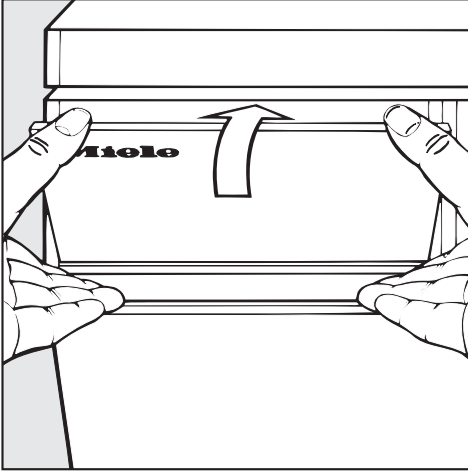

- Set the small panel into the lower guide, press downwards and at the same time slot into the upper guide.

Use of the appliance

This automatic tumble dryer is particularly suitable for use in communal laundry rooms, laundrettes etc. where considerable amounts of soiled laundry are dealt with.

Preparation of laundry

Wash care labels

Before drying check the drying symbol on the wash care label.

Significance of symbols:

☐ = Dry at normal temperature

☐ = Dry at low temperature

☒ = Do not tumble dry

If no symbol is featured dry at your own risk applying the following principles:

Cottons and minimum iron items

should be dried at a normal temperature using the appropriate programme setting.

Delicate fabrics with the following wash care label ☐, e.g. acrylics should be dried at a low temperature.

The following fabrics should not be dried in a tumble dryer:

Woollens and wool blends

these fabrics tend to become matted and shrink.

Items filled with down

the fine fabric interior tends to shrink, depending on the quality involved.

Pure linen

should only be machine dried if specified as suitable by the manufacturer on the wash care label, as the surface of the fabric may otherwise tend to roughen.

General notes

Woven and loopkit materials (e.g. T-Shirts, knitted garments) tend to shrink to varying extents depending on their quality. This tendency is exaggerated by over-drying. When purchasing woven materials, it is advisable to take their shrinkage properties into account.

Starched laundry can be dried in the tumble dryer. To achieve the usual finish, double the amount of starch should be used.

Minimum iron fabrics should be spun briefly at the end of their wash programme, or spun for 10 to 30 seconds if hand washed before they are dried. Some fabrics tend to crease if over-dried. These items should be given only a short period in the dryer, and taken out slightly damp. Do not use the ⑤ Minimum iron - ⑦ Normal+ programme for these fabrics.

Minimum iron shirts in 100% cotton

may crease during tumble drying depending on the quality of the weave. These should be dried using the Hand iron ⑨ setting. In extreme cases drip dry on a coat hanger.

Minimum iron fabrics tend to crease more the greater the load. This is particularly the case with delicate fabrics. The load should be reduced to 2 kg or if necessary to 1.5 kg.

New dark coloured garments should be dried separately from light coloured garments to avoid the danger of colours running.

Programme chart

Programme	Laundry / Fabric type	max. load ¹⁾	Notes
A COTTONS			
❶ Extra dry	Multi-layered fabrics which would not be thoroughly dried using the ❷ Normal+ programme.	6 kg	To prevent shrinkage do not select the ❶ Extra dry programme for jerseywear.
❷ Normal+	Mixed loads of cotton fabrics, e.g. Turkish towelling and jerseywear, i.e. single - and multi - layer fabrics.	6 kg	
❸ Normal (EN 61121)	Loads of similar cotton fabrics (jerseywear, flannelette sheets, Turkish towelling).	6 kg	Should certain items still be slightly damp, select the ❶ Extra dry or ❷ Normal + programmes
❹ Hand iron Δ	Cotton or linen fabrics, e.g. table linen, bedding, starched laundry, etc.	6 kg	-
❺ Hand iron ΔΔ (EN 61121)		6 kg	If fabrics are too damp for hand ironing, select the ❹ Hand iron Δ programme.
❻ Machine iron	Cotton or linen fabrics, also starched laundry, for machine ironing.	6 kg	Laundry should be rolled up to prevent it from drying out until it can be ironed.

¹⁾ Weight of dry laundry

Programme chart

Programme	Laundry / Fabric type	max. load ¹⁾	Notes
B MINIMUM IRON			
7 Normal +	Minimum iron items made of synthetics or blended fabrics, e.g. pullovers,dresses, trousers etc., which are not dried adequately in the 8 Normal programme.	3 kg	With blended fabrics consisting of wool and synthetics, consult the manufacturer's instructions, as the wool component may cause the fabric to become matted.
8 Normal (EN 61121)	Minimum iron shirts, table cloths, etc., made of blended fabrics, e.g. cotton/synthetics.	3 kg	
9 Hand iron	Minimum iron shirts, table cloths, etc., made of blended fabrics, e.g. cotton/synthetics which are still to be hand-ironed.	3 kg	
C Timed drying			
10 Cold air	Items which are only to be aired.	6 kg	-
11 Hot air	Individual items, e.g. towels.	6 kg	-

¹⁾ Weight of dry laundry

❶ Prepare the laundry

 
- As far as possible, sort laundry for:
 - the type of fibre or weave
 - the degree of dryness required
 - similar size of items
 - the moisture content after spinning.

This will help towards achieving an even drying result.

- Fasten duvet covers etc. to prevent small items from being rolled up inside them.
- Do up zips and tie fabric belts and apron strings.

Make sure there is no detergent dispenser ball etc. in with the laundry, as this could melt and damage the machine and the laundry.


❷ Load the drum

- Press the door button  and open the door.
- Load the laundry loosely into the drum.

Do not overload the drum. Overloading can cause unnecessary wear and tear to the laundry and give a disappointing drying result.

See the programme chart for maximum loads.

- Before closing the door check that the fluff filter is correctly positioned.

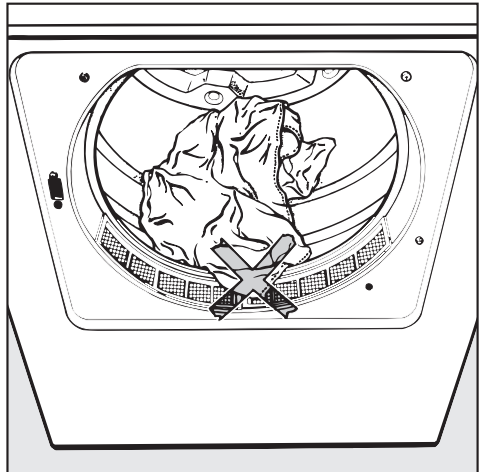


Important: Please check that items of laundry cannot be trapped by the door, as this will cause damage to the fabric.

- Shut the door with a firm swing.

How to dry correctly

③ Select a programme

- Turn the programme selector to the programme required.
- Select low temperature  if required.

If the machine is fitted with a coin mechanism / time counter:

- Insert coins or tokens.

 
 

Remember to empty the coin / token box regularly, so that it does not become blocked.

For further information on operating the dryer with a coin mechanism / time counter see “Installation”.

④ Start a programme

- Press the Start  button.

⑤ At the end of a programme


- Turn the programme selector to the  End position.
- Press the door  button to open the door.
- Press the Light  button.
- Remove the laundry from the dryer.

Make sure that the drum is empty. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

If laundry is not taken out of the dryer at the end of the programme the dryer will commence an anti-crease phase, during which the drum rotates at timed intervals to keep the laundry suspended and reduce the risk of creasing.

 
- To save both energy and operation time the fluff filter in the door should be cleaned after every programme (see “Cleaning and Care”).
- Shut the door when you have finished. As a safety precaution do not leave the door open when not in use.

To cancel a programme


- Turn the programme selector switch to the  End position.

For safety reasons all programmes where the residual moisture content is monitored have a maximum running time of 130 minutes, after which period the heater elements are switched off and the cooling down phase commences.

Adding or removing items



- Press the door  button to open the door.

If the door is opened during drying the programme will have to be started again. Take out or add items as required.

- Close the door.
- Press the Start  button.

The programme selected will then continue from the point it was at when the door was opened.

The programme is not continued

- if there is a power failure lasting more than 30 minutes
- if the programme has already reached the  cooling down phase or the  Anti-crease stage.

To select a different programme during drying

- Turn the programme selector to the required programme.

The new programme starts from the beginning.


Cleaning and care

Cleaning the fluff filters


The fluff which occurs during drying is collected in the fluff filters in the door and in the door opening. Clean the filters after every programme to reduce drying time and save energy.

- Push the cleaned filter back into the door holder and close the door.

If there is a great deal of compacted fluff on the filters, they can be cleaned under hot running water.

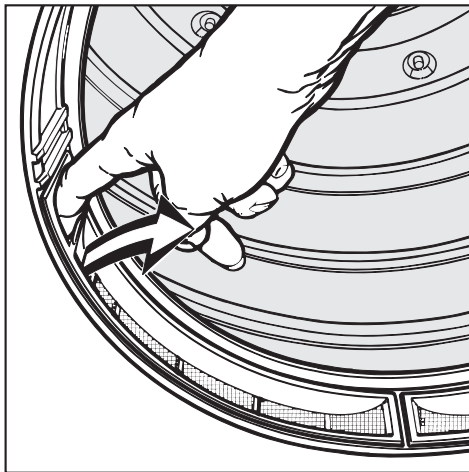

- The filter in the door opening should only be removed for cleaning with water (see illustration for instructions on how to remove it).
- After cleaning shake any excess water off the filters.
- Dry them carefully and thoroughly.
- Replace the filters in the door opening.
- Replace the filter in the door, ensuring it is fitted the correct way round in its holder.

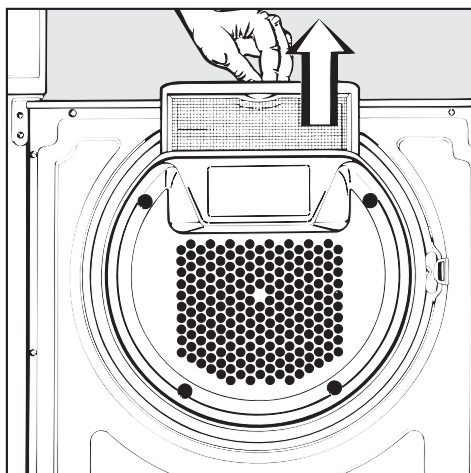

- Open the door and pull the fluff filter up out of the door holder.
- Remove the fluff from:
 - the filter in the door
 - the filters in the door opening**(do not use sharp or pointed objects.).**
- Remove any fluff from the hollow part of the door holder through the wide slit at the bottom.

A cleaning brush is available at extra cost from the Miele Spare Parts Department.

Casing and drum

Disconnect the machine from the mains electricity supply.

Avoid contact of stainless steel surfaces (front, lid, casing) with liquid cleaning and disinfecting agents which contain chlorine or sodium hypochlorite. These agents can have a corrosive effect on stainless steel. Aggressive vapours containing chlorine bleach can also be corrosive. Do not store open containers or these agents near the machine.

- Clean the housing and control panel with a mild detergent or soapy water.
- Clean the drum and other stainless steel parts with a suitable proprietary stainless steel cleaner following the manufacturer's instructions.

Never use abrasive substances, disinfecting agents or solvents. These could damage the machine because of their chemical content. The machine must never be hosed down.


- Dry all parts with a soft cloth.

Problem solving guide

What to do if . . . ?


With the help of the following notes minor faults in the performance of the machine, some of which may result from incorrect operation, can be put right without contacting the Service Department.

Repairs to the machine should only be undertaken by a suitably qualified service engineer to ensure safety. Unauthorised repairs could be dangerous.

Fault	Possible cause	Remedy
The machine fails to start when switched on.	No obvious cause.	Check that <ul style="list-style-type: none">– the door is properly shut.– the machine is switched on at the mains and the fuse is not defective.
The programme has been interrupted.	The load was too small or consisted of individual items which caused the programme to finish prematurely.	– Dry small amounts of laundry using the Timed Drying  programme.
Laundry is not sufficiently dried.	The load consisted of too many types and thicknesses of fabric.	– Select a more suitable programme next time (see "Programme overview")

Fault	Possible cause	Remedy
Drying times are too long.	The fluff filters might be clogged up.	– Clean as described in “Cleaning and Care”.
	Ventilation to and from the dryer is insufficient (e.g. in a small room).	– Open a door or window while the machine is operating to increase air flow.
	The ventilation ducting or room ventilation (e.g. window or wall vents are blocked).	– Remove any objects that are causing the blockage.
	The laundry was not sufficiently spun.	– Spin the laundry in the washing machine at the highest possible speed.
	Metallic components e.g. zips have prevented the dryer from registering the correct moisture level in the laundry.	– Complete the drying process using a Timed Drying programme.
	If after checking all the above, drying times are still too long, there may be a fault. Contact the Service Dept.	
	The heater limiter has automatically switched off one or more heater elements.	– Contact the Service Dept.


Problem solving guide

Fault	Possible cause	Remedy
There is a build up of fluff.	Fluff comes off textiles naturally during wearing and washing. The fluff that collects in the filters of a tumble dryer has no effect on the lifetime of your laundry.	– Remove any fluff from the fluff filter (see “Cleaning and Care”).
Items made of synthetic fibres are charged with static electricity after drying.		– Static charges can be reduced by adding liquid fabric conditioner to the final rinse of the wash programme.
The interior drum lighting does not come on when the  button is pressed.	The lamp is defective.	– Change the lamp as described on the next page.

To change the lamp

Disconnect the machine from the mains electricity supply.

- Open the door.

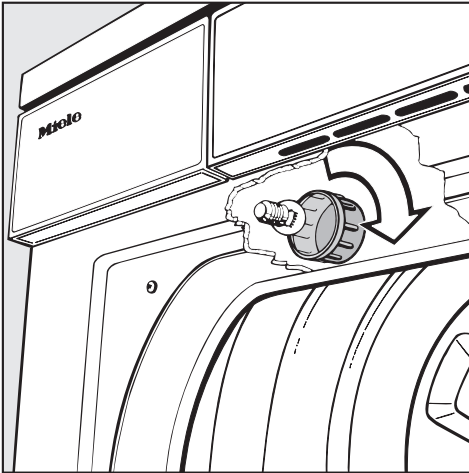

- Unscrew the plastic cover inside the drum, above the door.


The lamp must not exceed the maximum wattage quoted on the data plate and on the plastic light cover.

The temperature resistant lamp should be ordered from your Miele Dealer or the Miele Spare Parts Department only.

- Replace the lamp and screw the plastic cover back on.

The cover must be fixed securely, as otherwise moisture may seep in and cause a short circuit.

To open the door during a power cut

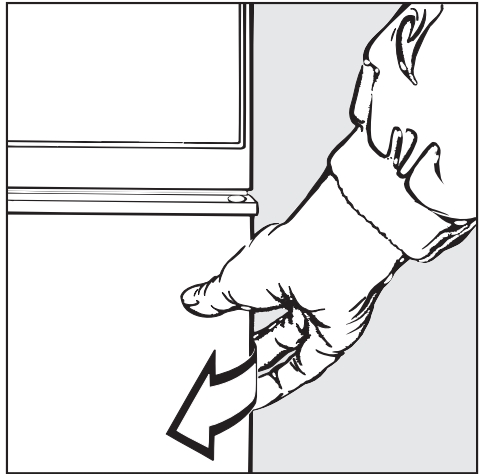

- Pull the door open.

Problem solving guide

Service

In the event of any faults which cannot be remedied, or if the machine is under guarantee, please contact


- Your Miele Dealer or
- The nearest Miele Service Department (see back cover for address)

When contacting the Service Department, please quote the Model and Serial numbers, both of which are located on the right hand side below the opening on the drum.

Example:




View from the front

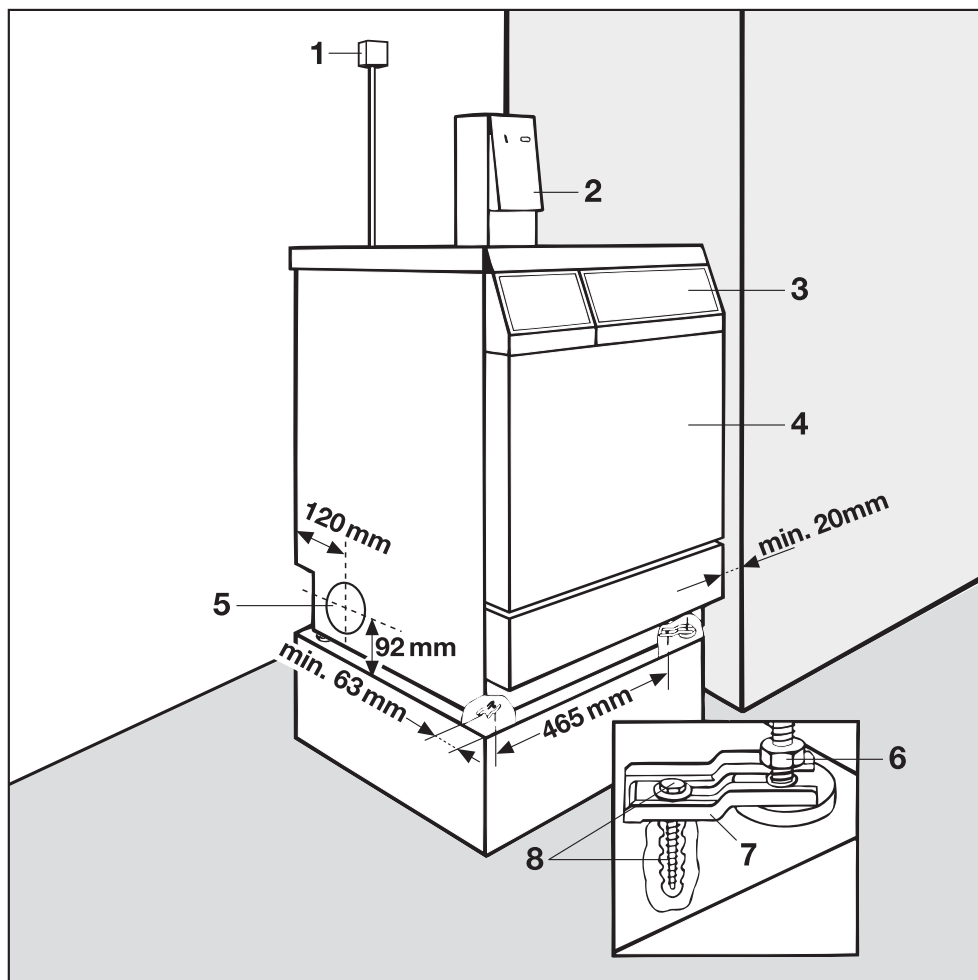

- | | |
|------------------------------------|--|
| 1 Isolator switch | 5 Exhaust connection DN 100
Exit to the rear or through the
left hand side of the machine |
| 2 Coin mechanism (optional) | |
| 3 Control panel | |
| 4 Door | 6 Hexagon headed nut M 10 |
| | 7 Clamp |
| | 8 Screw, Washer, Plug (8 x 40) |

Installation

View from the rear

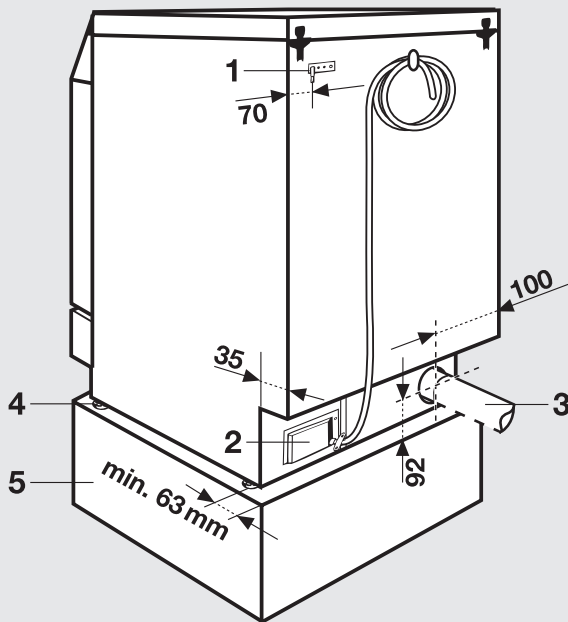

1 Cable connection point for coin mechanism / time counter


2 a.c. connection cable (approx. 2 m long)

3 Exhaust ducting


4 Four height adjustable screw feet

5 Plinth base if required:
- masonry base built on site or
- Miele steel plinth S 5005
available at extra cost

Aligning the machine

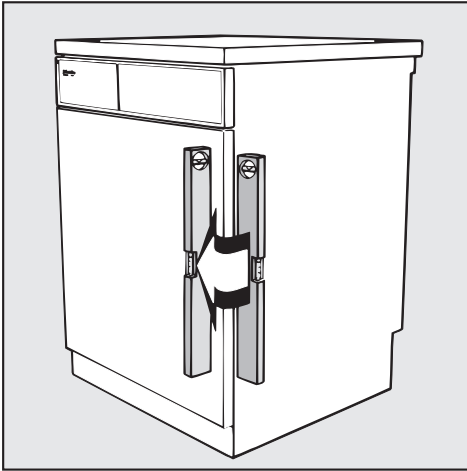

The machine must be perfectly level to ensure safe and proper installation.

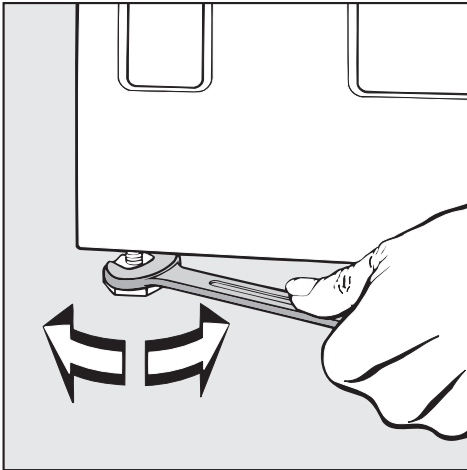

- The screw feet can be adjusted to compensate for any unevenness in the floor.

Take into consideration the space required by the vent duct when calculating the distance between the machine and a wall or other appliances etc. to the sides or rear of the machine.

A ventilation gap of 10 mm must be maintained between the base of the machine and the floor. This must not be blocked by sealing strips, deep pile carpet etc., as otherwise there will be insufficient flow of cool air for the machine to function correctly.

The machine must not be built under.

Coin mechanism / Time counter

This dryer can be fitted with a coin mechanism.*

It can also be connected to an existing time counter using a special connection cable*.

Do not use devices to turn the machine off automatically, (e.g. automatic timers).

The tumble dryer can be combined with a Miele washing machine in a washer-dryer stack. For this purpose the appropriate stacking kit * is required.

* These items are all available from your Miele Dealer or the Miele Professional Sales Dept.

Installation - venting

Fitting the exhaust ducting

The moist air produced during drying has to be vented to the outside.

The dryer must only be operated when it is correctly fitted with exhaust ducting.

The exhaust connection may be made:


- to the rear of the machine (the machine is supplied as standard with this connection point open) or
- to the left of the machine.

The side exhaust connection has a cover cap.

Exhaust connection to the side of the machine

Disconnect the machine from the mains electricity supply.

- Remove the cover cap.

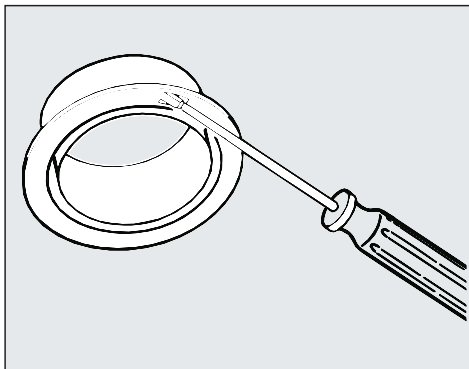

- Insert a thin screwdriver into the slit on the retaining hook and press the hook gently upwards.

- At the same time turn the cover cap anti-clockwise.

Vent socket

- In the same way remove the vent socket from the rear vent outlet.
- Secure into the side outlet by turning clockwise.
- Close the rear outlet with the cover cap.

Avoid:

- very long exhaust systems
- too many corners
- tight corners.

These reduce efficiency and increase time and energy consumption.

The following materials are suitable for the exhaust ducting:

- galvanized steel
- plastic ducting
- flexible ducting.

Note that all ducting must be of a suitable heat resistant specification.

Install the exhaust ducting so that the expelled exhaust air cannot be sucked into the machine again.

Standard accessories include an adapter for the exhaust ducting:

Application:

In installations where conditions do not allow the machine to be permanently connected to a ducting system.

Purpose:

The adapter enables rapid, simple connection or disconnection of the exhaust ducting.

Installation:

The adapter is fitted to the non-connected end of the vent duct.

Important
Connection must not be made to a flue used by gas or solid fuel boilers or heaters.

Installation - venting

Calculating the duct length

The shortest passage for the expelled air is preferable, to ensure the tumble dryer functions most efficiently. Expelled air is slowed down in the vent duct due to friction against the inner walls of the duct, therefore the shorter the duct and the smoother the inner walls, the less friction occurs.

An elbow or bend creates more friction than a straight duct. An additional duct length factor should therefore be calculated for each elbow or bend (see Table I). This factor expresses the resistance of the bend in terms of a straight length of duct.

The additional length factor is then added to the actual duct length to give the effective total duct length.

A larger duct diameter also helps to reduce friction. The duct diameter should therefore increase with increasing duct length.

To calculate the effective duct length:

- Measure the actual duct length.
- Establish the number of elbows or bends necessary, noting the type of bend, angle and radius involved (see Table I).
- Add the additional length factor as specified in Table I to the actual duct length to give the effective duct length.
- The appropriate duct length can then be taken from Table II.

Note

Drying times and energy consumption remain unaltered for Ø100 mm ducting up to a total length of 15 metres. Longer ducting may lead to slight increases in drying times and energy consumption, but does not impair the function of the machine, if the necessary duct diameter is adhered to (see Table II).

Table I

Type of bend	Angle	Radius R in mm	Additional duct length in metres
Flexible ducting (heat resistant)	90°	100 to 400	0.5
	45°	100 to 400	0.3
Plain ducting (heat resistant)	90°	100	0.35
Plastic ducting (heat resistant)	90°	200	0.25
Elbow			2.3
Concertina bend	90°	200	0.7
Wall vent with grille or window vent kit			3.6
Wall vent kit with flap or window vent kit			1.25
Exhaust connection to the left			1.0

Table II

Overall duct length	Internal diameter
0 - 15 m	100 mm
15 - 21 m	110 mm
21 - 34 m	120 mm


Flexible ducting has been used for the following example. See Table I for additional duct length factors for other types of ducting.

Example:

Side connection.	1.00 m
Length (L)	2.50 m
Lower radius R = 400 mm.	0.50 m
Height (H)	2,00 m
Upper radius R = 200 mm	0.50 m
Wall duct with louvred vent.	<u>3.60</u> m
	10.10 m

Result:

A duct diameter of 100 mm is adequate, since the overall length is less than the 15 metres specified in Table II.

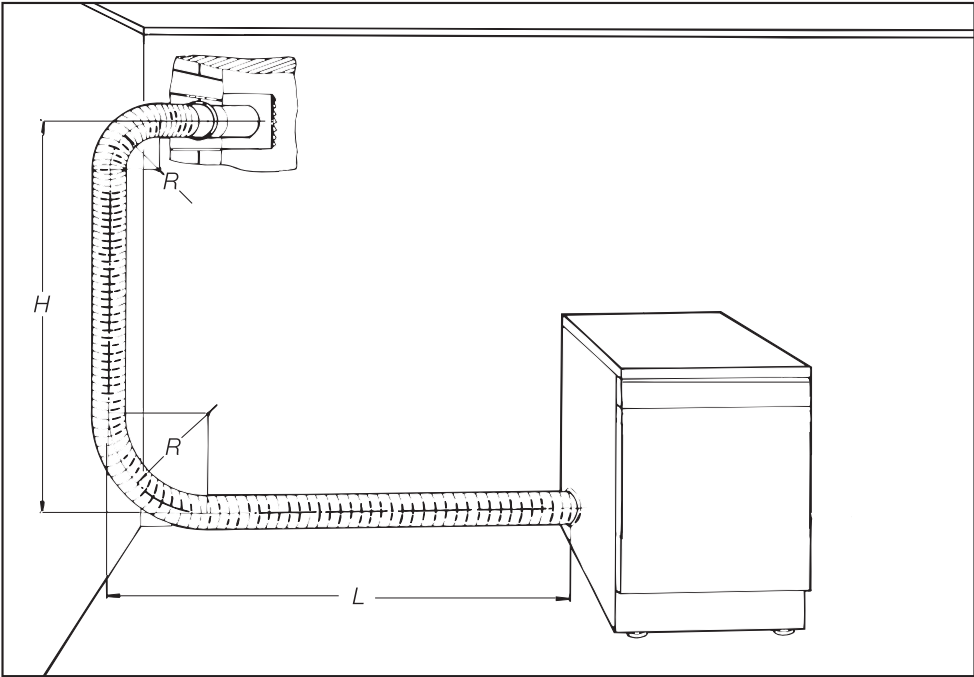


Installation - venting

Installation examples

The moist air can be directed to the outside using a Wall vent kit* or a Window vent kit*.

The kits/parts (marked *) are available from your Miele Dealer or the Miele Spare Parts Dept.


Wall vent kit* (with necessary parts)

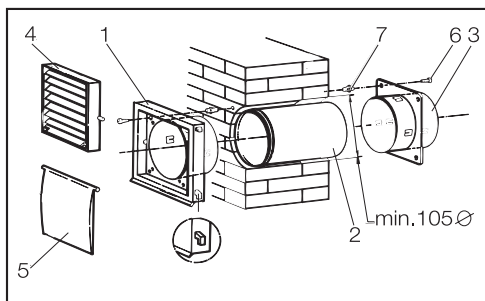

1. Louvre frame
2. Wall pipe
3. Connecting piece
4. Louvre grill
5. Flap
6. Wood screw
7. Wall plug

Connection directly to a wall vent

If the dryer is connected directly to a wall vent a flexible foam gasket* is required.

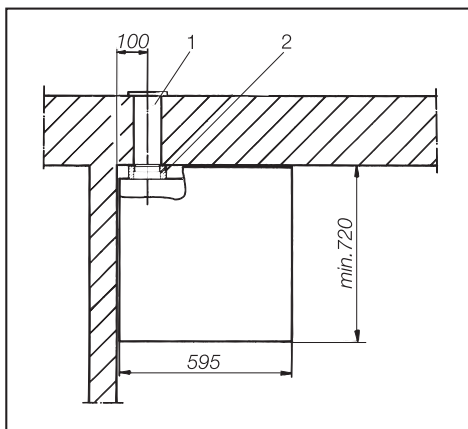


1. Wall pipe*
2. Flexible foam gasket*

- Fit the gasket to the connecting piece on the wall pipe and push the dryer up against the wall.


Upward ducting via plastic vent ducting* to wall vent*

Adapter* required.

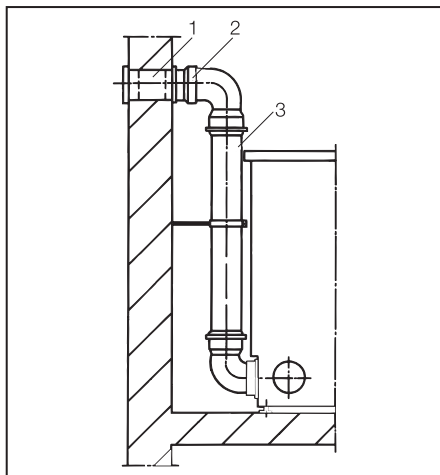


1. Wall pipe*
2. Adapter*
3. Plastic ducting (external Ø 110 mm)

Connect the plastic vent ducting to the dryer

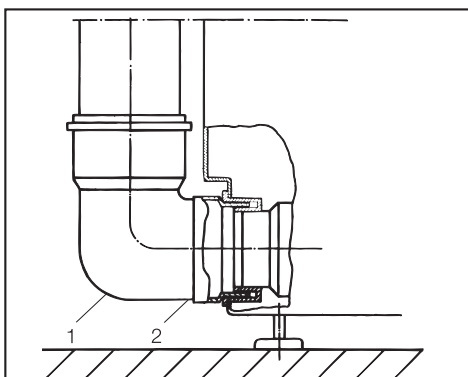

1. Plastic ducting
2. Adapter* between exhaust outlet and plastic ducting

Upward ducting via flexible vent ducting* to exhaust flue

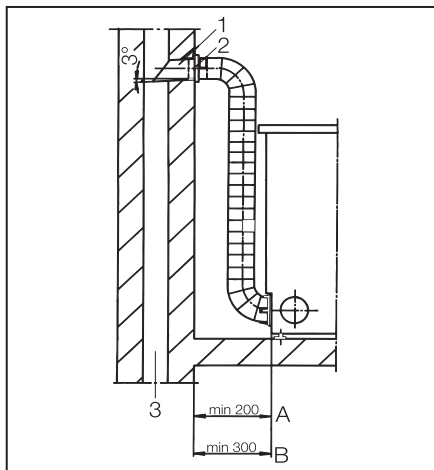


- A = Wire wound spiral ducting
B = Flexible ducting

1. Wall pipe*
2. Adapter*
3. Flue / chimney, insulated against damp

The exhaust air must not be vented into a chimney or vent flue which is in use. Neither should it be connected to ducting which ventilates rooms with fireplaces. It would be dangerous if smoke or exhaust fumes were drawn back into the room!


Installation - venting

Window vent kit* (with necessary parts)

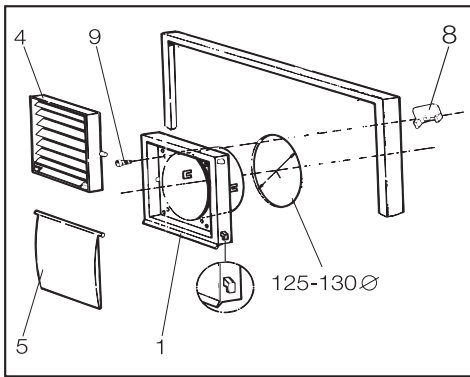

- 1. Louvre frame
- 4. Grille
- 5. Flap
- 8. Clip (4x)
- 9. Raised head screws (4x)


Window vent kit* with flexible ducting

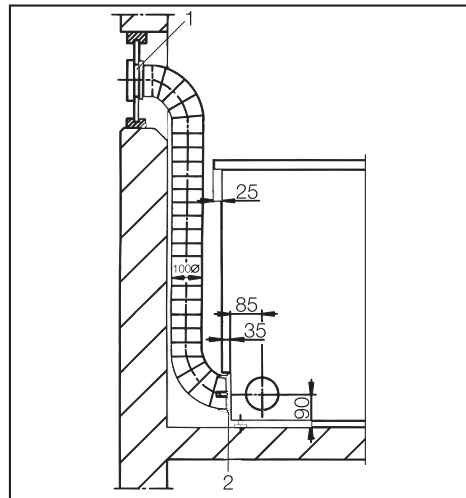

- 1. Window vent*
- 2. Adapter for flexible ducting
Ø 100 mm

(Window vent fitted in plexiglass pane)

Washer/Dryer stack

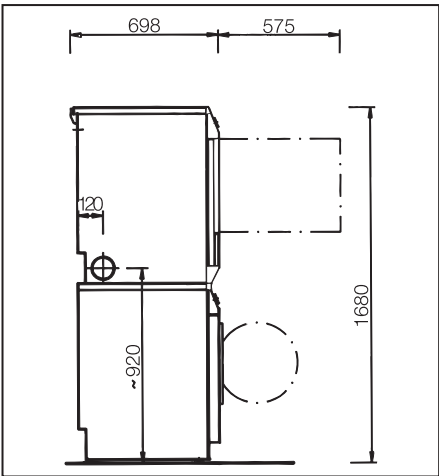

Height of venting outlet for washer/dryer stack.

Electrical connection U.K.

All electrical work should be carried out only by a suitably qualified and competent person, in strict accordance with national and local safety regulations.

Ensure power is not supplied to the appliance while installation work is being carried out.

The appliance is supplied with a mains cable (approx. 1.8 m long) for connection either to a 230-240V single phase supply or to a 415 V 3-phase + N supply. The voltage, rated load and fuse rating are given on the data plate. Please ensure these match the household mains supply.

Connection should be made via a suitable isolator which complies with national and local safety regulations, and the on/off switch should be easily accessible for servicing work.

For extra safety it is advisable to install a residual current device (RCD), with a trip current of 30 Ma (in accordance with DIN VDE 0664, DIN VDE 0100 Section 739).

When switched off there must be an all-pole contact gap of 3 mm in the isolator switch (including switch, fuses and relays acc. to VDE 0660.

Important

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

WARNING:
THIS APPLIANCE
MUST BE EARTHED

Electrical connection (IRL)

This tumble dryer is supplied as standard for connection to a 400 V 3-phase + N supply. The rated load is 5.4 kW. Connection should be made via a suitable isolator which complies with national and local regulations, and the on/off switch should be easily accessible for servicing work. For extra safety it is advisable to install a residual current device with a trip current of 30 mA.

The voltage, rated load and fuse rating are given on the data plate. Please ensure that these match the site mains supply.

WARNING
THIS APPLIANCE MUST BE
EARTHED.

Electrical connection

Electrical connection TE 5206

All electrical work must be carried out only by a competent person in accordance with local and national regulations.

This machine is supplied for connection to either:

440V ~3 phase supply 60Hz
without neutral

or

400V ~ 3 phase supply 50 Hz
without neutral

or

230V ~3 phase supply 60 Hz
without neutral

or

400V ~2 phase supply 50 Hz
(Electrical connection see Electrical connection T 5206)

The machine is not convertible.

The voltage, rated load and fuse rating are given on the data plate. Please ensure these match the site mains supply.

Connection should be made via a suitable isolator which complies with national and local regulations, and the on/off switch should be easily accessible for servicing work. For extra safety it is advisable to install a residual current device with a trip current of 30 mA.

Technical data

Height	85.0 cm (adjustable +1/-0.5 cm)
Width	59.5 cm
Depth (incl. distance from the wall)	70.0 cm
Weight	57 kg
Drum volume	126 litres
Capacity	6 kg dry weight
Voltage	} see data plate
Rated load	
Fuse rating	
Max. load bearing in operation	approx. 68 kg
Test certificates awarded	Radio/TV suppression, (VDE in Germany)
Noise level (according to 3. GSGV)	< 70 dB(A)

**Ireland:**

Miele Ireland Limited

Broomhill Business Complex, Broomhill Road, Dublin 24

Tel. (01) 46 10 710, Fax (01) 46 10 797

United Kingdom:

Miele Co. Ltd.

Fairacres, Marcham Road, Abingdon, Oxon, OX14 1TW

tel. Abingdon (01235) 554455 - fax (01235) 554477

Service Office, tel. Abingdon (01235) 554466

Internet: www.miele.co.uk